APPLICATIONS

Cadillac CTS 2003-2007
Cadillac SRX 2004-2006

CT23CA03


KIT FEATURES


- DIN Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Radio Provision
- Stacked ISO Mount Units Provision
- Stacked DIN Head Units Provision
- Painted To Match Factory Dash





KIT COMPONENTS

A) Radio Housing • B) DDIN Brackets • C) DDIN Trim Plate • D) ISO Brackets • E) Trim Plate • F) (8) Phillips screws • (G) Pocket

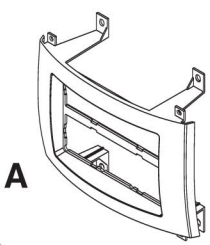


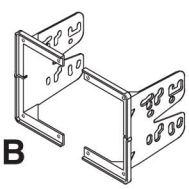

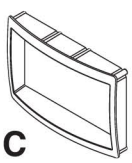

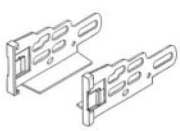







TOOLS REQUIRED:

Phillips Screwdriver • Small Flat Blade Screwdriver • Socket Wrench







TABLE OF CONTENTS

Dash Disassembly *1*

Kit Assembly *2, 3, 4*

Final Assembly *5*

CADILLAC CTS 2003-2007
CADILLAC SRX 2004-2006

1 Disconnect the negative battery terminal to prevent an accidental short circuit.


2 Unclip and remove the center air vent assembly above the radio. **(Figure A)**

3 Open ashtray and remove (1) Phillips head screw from inside ashtray.


4 Unclip and remove the a/c control/ ashtray assembly below the radio. **(Figure B)**

5 Remove (4) 10 MM screws securing the radio to the dash. **(Figure C, D)**


A

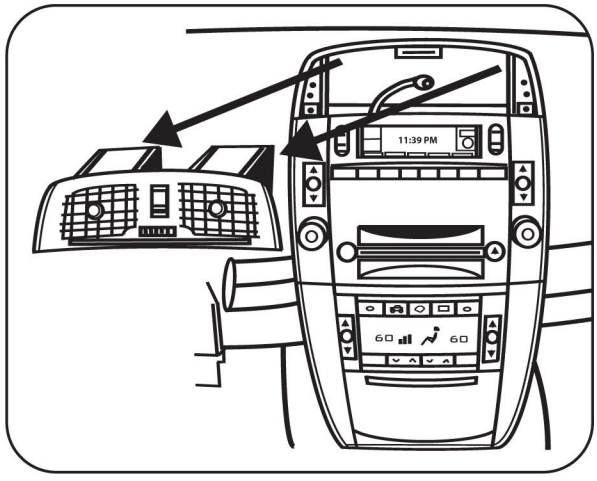


B

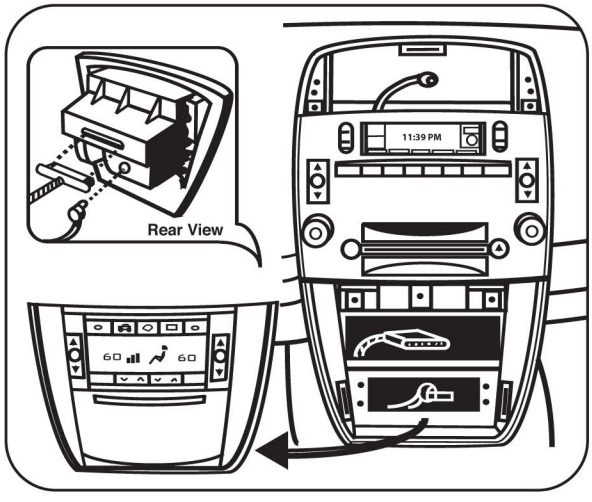

D

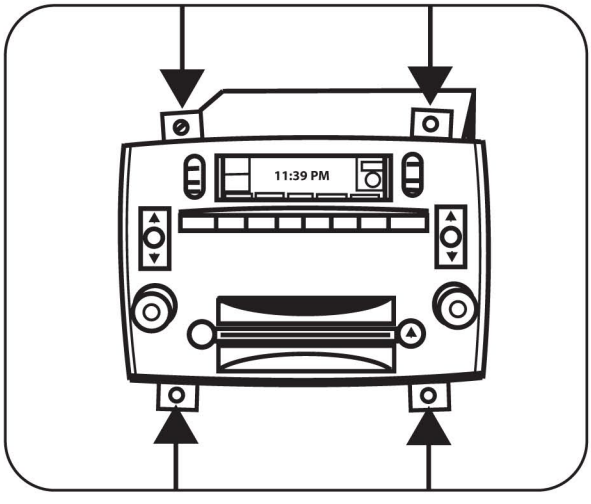

C

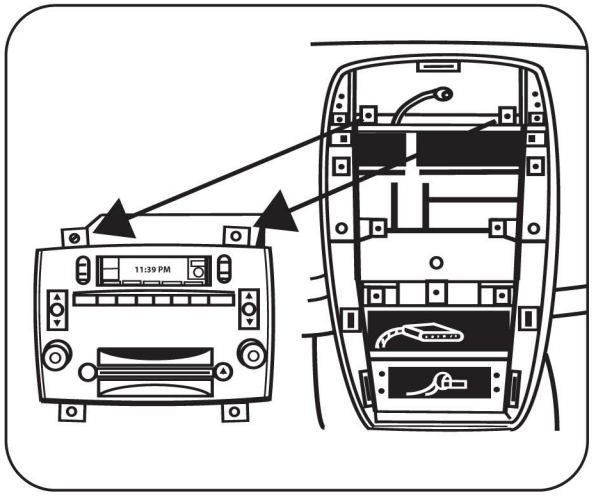


DIN RADIO PROVISION WITH POCKET

1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. **(Figure A)**


2 Slide the aftermarket head unit into the cage and secure. **(Figure B)**

3 Slide the supplied pocket into the unused opening.

A

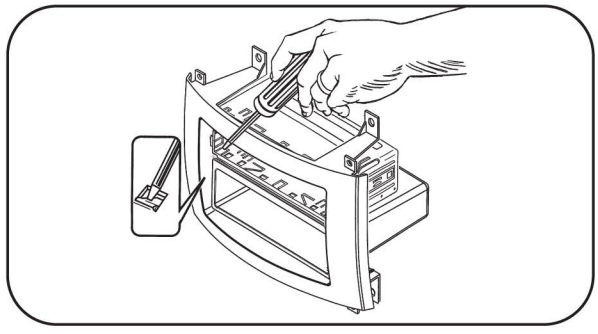

B

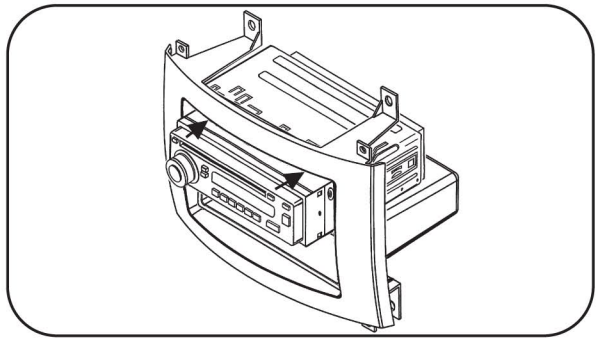

ISO MOUNT RADIO PROVISION WITH POCKET


1 Mount the ISO Brackets to the head unit with the screws supplied with the unit. **(Figure A)**

2 Slide the head unit into the radio opening until the side clips engage. **(Figure B)**


3 Snap the Trim plate into the Radio Housing. **(Figure B)**

4 Slide the supplied pocket into the unused opening.

A

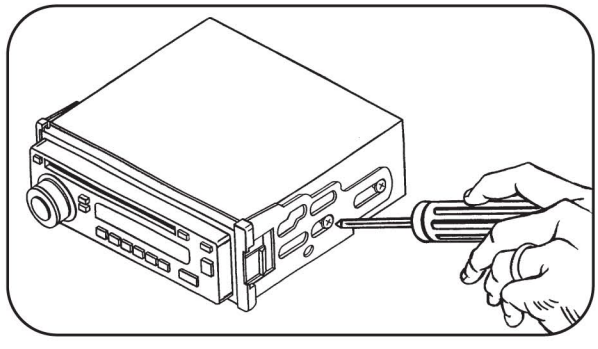

B

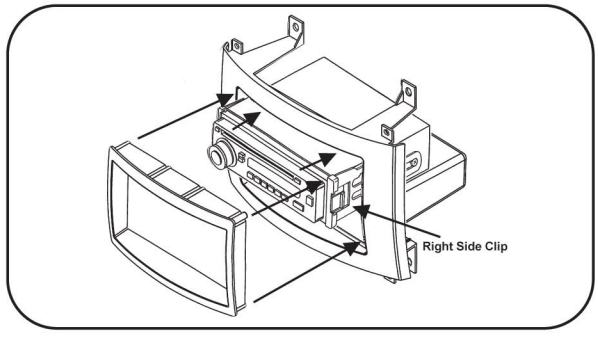

DOUBLE DIN RADIO PROVISION


1 Remove the centre bar from the CT23CA03 facia.

2 Attach the corresponding bracket to the DDIN head unit. **(Figure B)**


3 Insert the DDIN trim plate into the radio housing. **(Figure C)**

4 Position the bracket/radio assembly to the back of the radio housing and secure with the (8) Phillips screws provided. **(Figure D)**


A

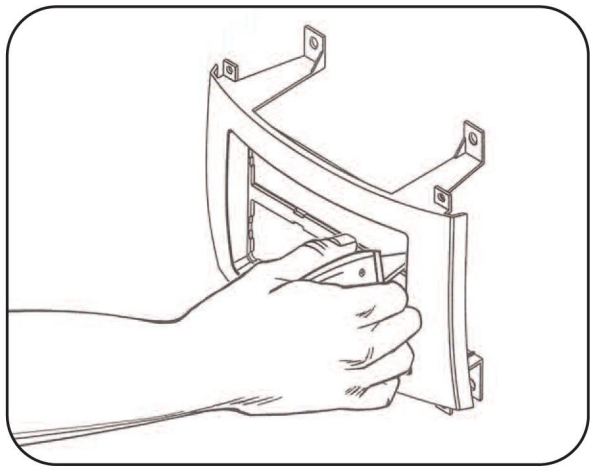


B

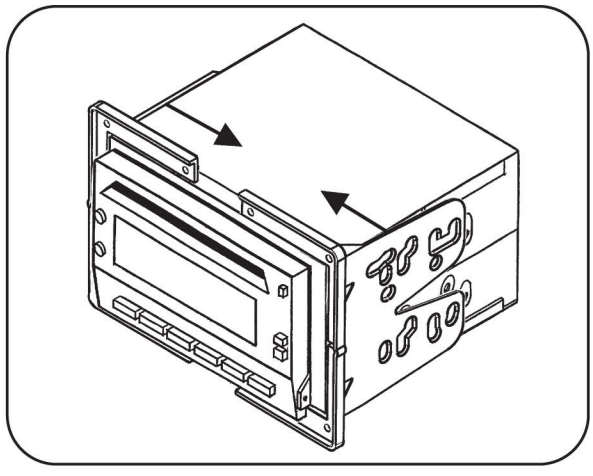

C

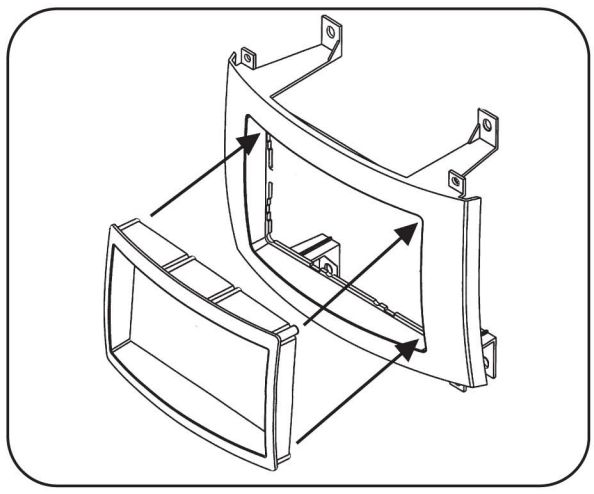

D

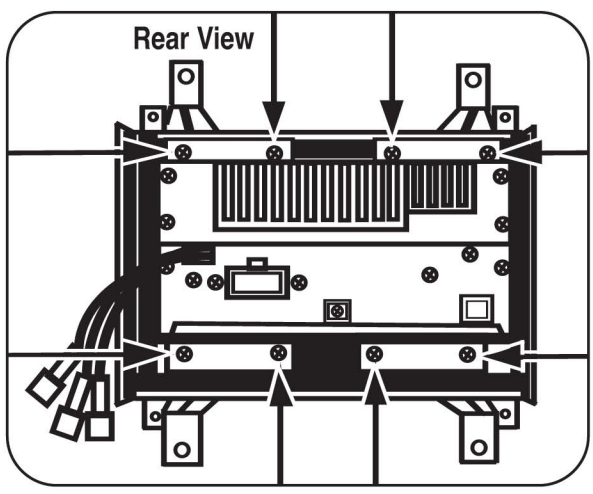


STACKED ISO MOUNT UNITS PROVISION

1 Mount the ISO Brackets to the head units with the screws supplied with the unit. **(Figure A)**


2 Slide the head units into the radio openings until the side clips engage. **(Figure B)**

3 Snap the Trim plate into the Radio Housing. **(Figure B)**

A

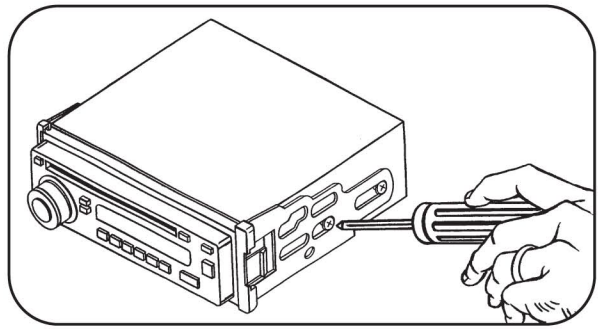

B

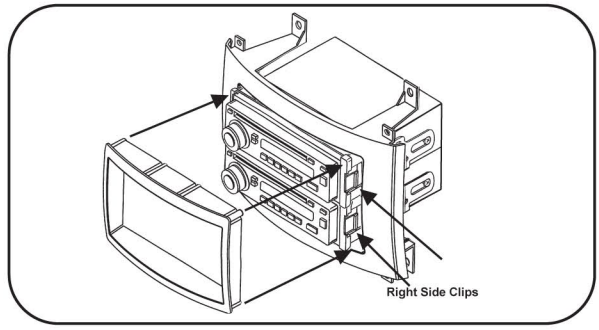


STACKED DIN HEAD UNITS PROVISION

1 Slide the DIN cages into the Radio Housing and secure by bending the metal locking tabs outward. **(Figure A)**

2 Slide the aftermarket head units into the cages and secure. **(Figure B)**

A

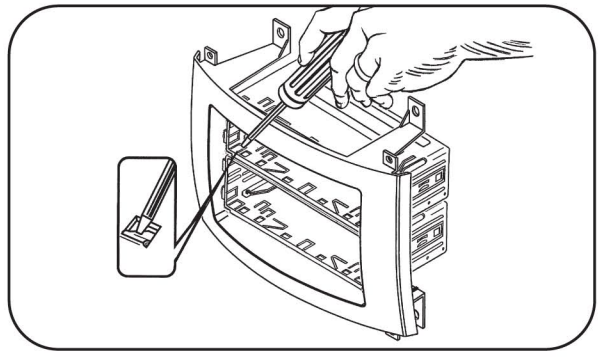

B

